
## FTM-300DR New Functions

# E<sub>2</sub>O-II (Easy to Operate-II)

Press the [F(SETUP)] key to display a function menu.

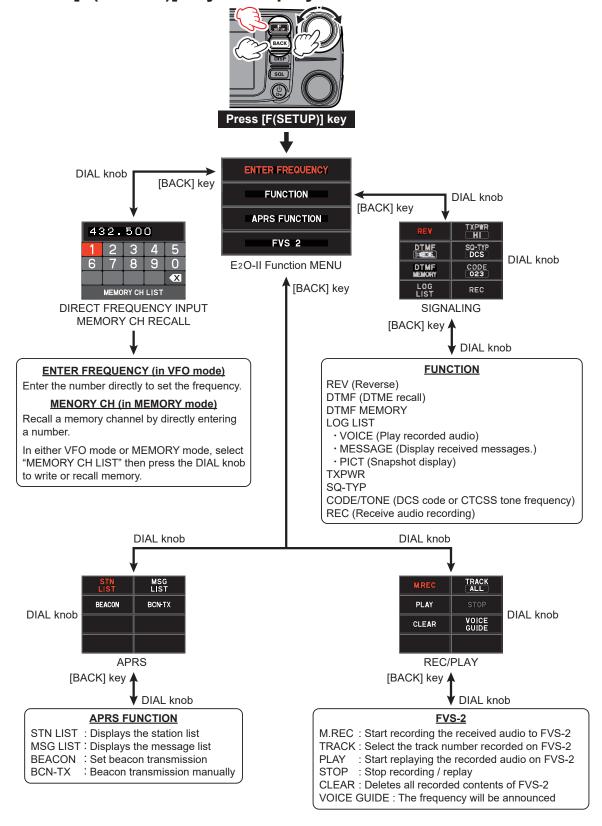


■ To set other functions, call up the menu screen by pressing and holding the [F(SETUP)] key.

SETUP MENU			
DISPLAY	TX/RX	MEMORY	
SIGNALING	SCAN	GM	
WIRES-X	CONFIG	DATA	
APRS	SD CARD	OPTION	
RESET	CLONE	CALLSIGN	

### **Memory Write**

- 1. Set the frequency to write to memory.
- 2. **[V/M(MW)]** (press and hold) → **DIAL** knob (select the memory channel number) → **[V/M(MW)]** (press and hold).

Please see the page 33 on the Operating Manual for more informations.

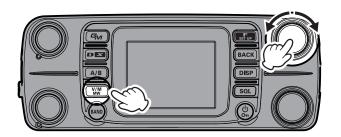


## **Memory Auto Grouping (MAG)**


- ① Memory Recall → Press [V/M(MW)] key
- ② Select MAG Group → Press [BAND] key



Each time the **[BAND]** key press switches the MAG Group.

Only memory channels of the 144 MHz band may be automatically grouped and recalled.

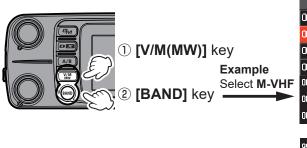

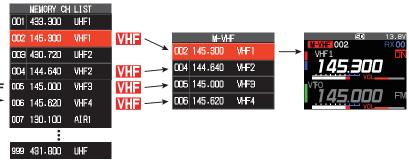


#### **MAG Groups**

M-ALL	All memory channels.
M-AIR	AIR band memory channels only.
M-VHF	144 MHz band memory channels only.
M-UHF	430 MHz band memory channels only.
M-GEN	VHF and UHF band memory channels only.
	Any Memory channels could be stored in M-GRP.
M-GRP	To store memory channels, display the memory channel, then press and hold the <b>[BAND]</b> key. The memory channel numbers in M-GRP are displayed in blue.
	To delete from M-GRP, select the memory channel then press and hold the <b>[BAND]</b> key.

## **Multi Channel Standby (MCS)**

### **Example: Operate MCS function with M-VHF MAG Group**

 - ① Memory Recall → Press [V/M(MW)] key
- ② Select MAG Group → Press [BAND] key
- ③ Start the MCS → Press and hold the [BAND] key




Each time the **[BAND]** key press switches the MAG Group.



To cancel the MCS, press any key except [A/B], [F(SETUP)], [SQL] and [Power].

## 61 channels Band Scope

- ① Activate Band Scope → Press [DISP] key
- ② Deactivate Band Scope → Press [DISP] key

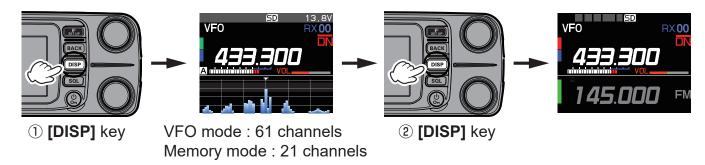

The center frequency and memory channel can be changed by turning [**DIAL**] knob.



### Change the number of channels displayed

- [F(SETUP)] (press and hold) → DIAL knob (select [DISPLAY]) → Press the DIAL knob.
- 2. **DIAL** knob (select **[3 BAND SCOPE]**) → Press the **DIAL** knob (select "WIDE" or "NARROW") → [DISP] (press).

The number of channels displayed in each mode is as follows:

	WIDE	NARROW
VFO mode	61 channels	31 channels
Memory mode	21 channels	11 channels

